

ATTENTION! PLEASE READ THIS INSTALLATION MANUAL BEFORE USING AND INSTALLING THE PRODUCT. KEEP THESE INSTRUC-TIONS FOR FUTURE REFERENCE.

- The installation of an awning must be carried out with care due to its constraints and requires a certain level of skill:

- Measuring and levelling the supports.
- Drilling the wall Installing chemical sealants or suitable fixings.
- Working at height and handling heavy loads.
- Electrical connection in the case of an electrically operated awning.

If you have any doubts about the correct and safe installation of your awning, call in a professional.

- Awning installation must be carried out according to the rules of the trade. A minimum of two people are needed, with personal protective equipment (PPE) and suitable materials. In the event of a problem, please consult a person qualified in this product for assistance.

- Follow the safety instructions to prevent damage from incorrect use! Observe all warnings in the awning manual and on the awning itself.

- This product presents a risk of falling and serious personal injury. All the assembly steps must be followed to the letter. If the brackets are misaligned or incorrectly fitted, the awning may fall or break. It is important for personal safety to follow these instructions.

- An awning is naturally subject to very high mechanical stresses due to the large lever arm (or overhang) between the wall brackets and the Front bar. An awning is not designed to withstand gusts of wind (even weak ones) and rain (pockets of water), which cause heavy overloads on the structure. In the event of bad weather or when you are not using the awning, fold it up.

- If the awning weighs more than 25kg per person, use a suitable lifting tool.
- If the awning is more than 5m wide, an extra person should be positioned in the middle.
- Do not allow children to play with the controls. Keep remote control devices out of the reach of children.

- The electrical wires must be connected in accordance with the electrical standards in force in France (standard NF C 15100).

Ч


1024AANG-1


450-570-



- Check that your wall is flat. If the wall is hollow or curved, shim the brackets so that they are correctly aligned. Incorrect alignment can cause the awning to malfunction, break or fall.


WALL INSTALLATION

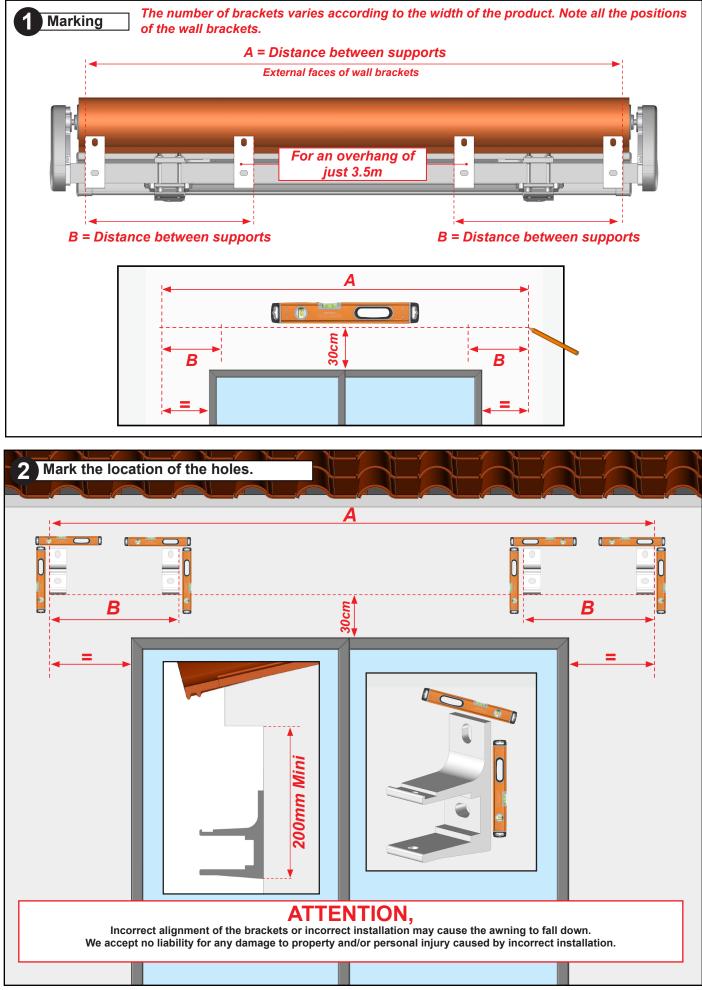

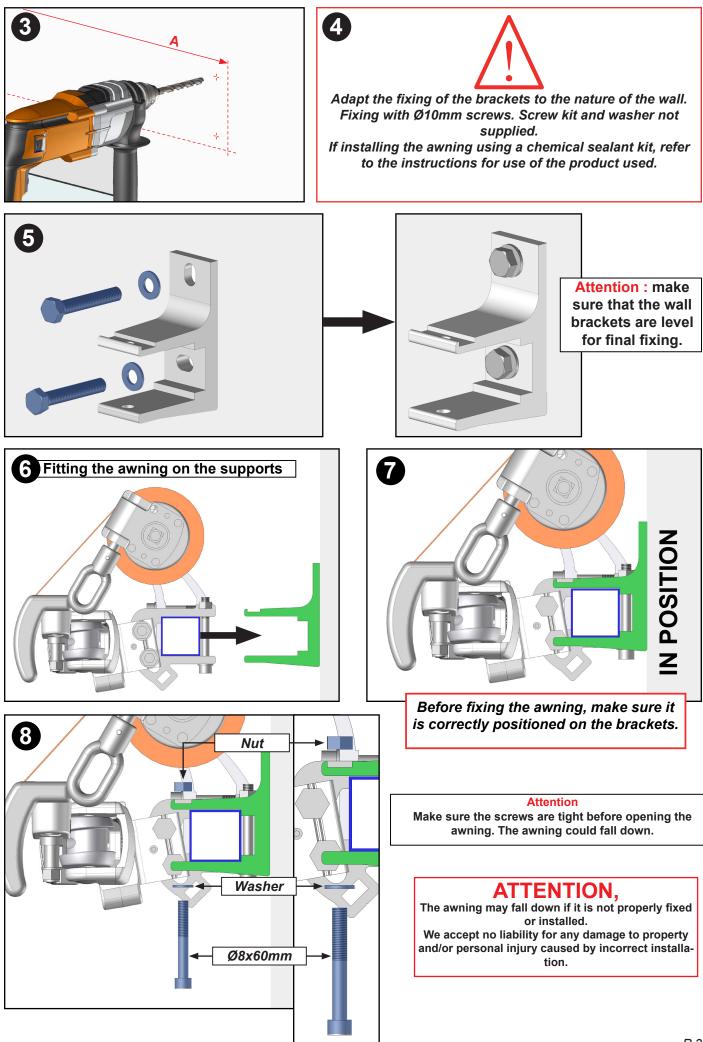


CEILING INSTALLATION OPTION


2

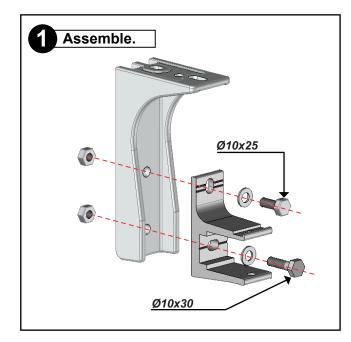




Adapt the fixing of the brackets to the nature of the wall. Fixing with Ø10mm screws. Screw kit and washer not supplied. If installing the awning using a chemical sealant kit, refer to the instructions for use of the product used.

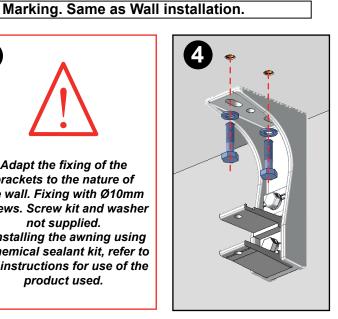

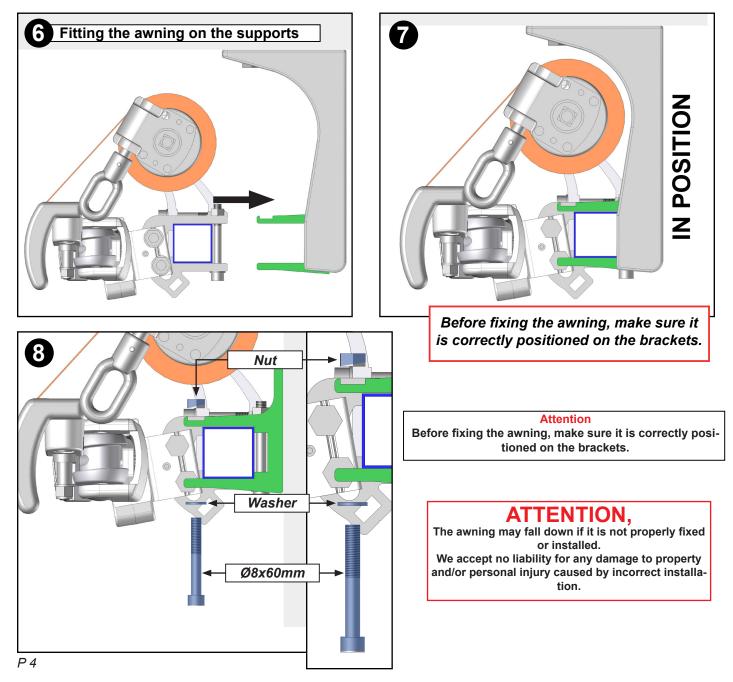

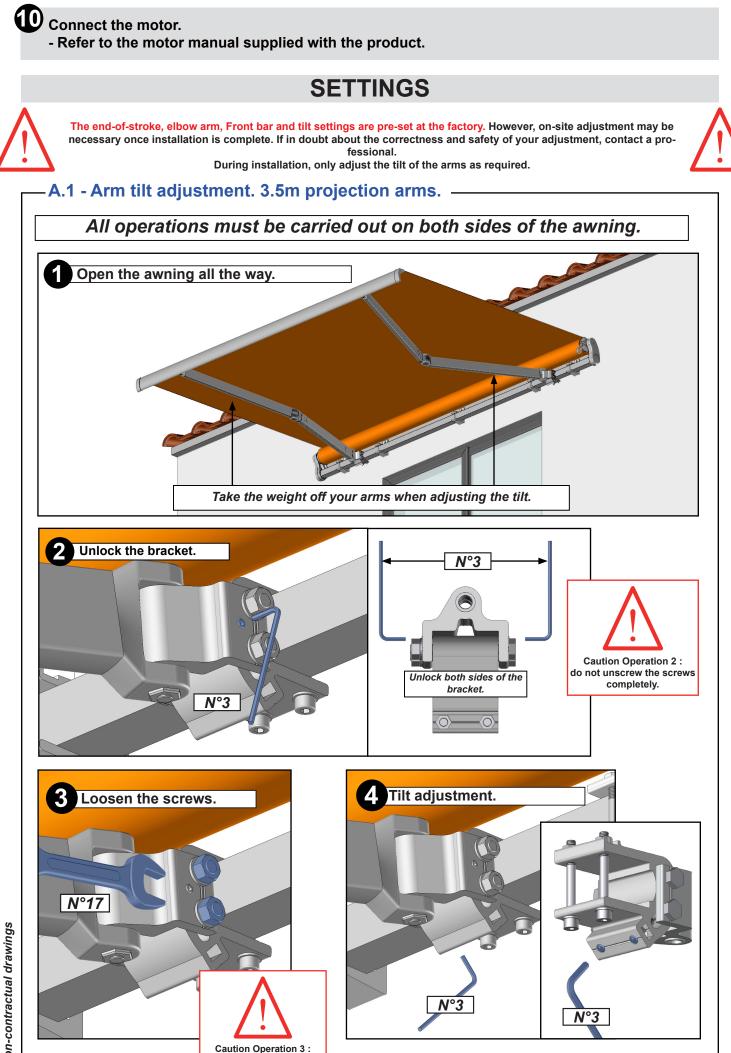

do not unscrew the screws

completely.


A.2 - Arm tilt adjustment. 3m projection arms. All operations must be carried out on both sides of the awning. 1 Open the awning all the way. Take the weight off your arms when adjusting the tilt. 3 Tilt adjustment. Loosen the screws. 2 N°4 Caution Operation 2: do not unscrew the screws completely. N°6


ATTENTION,

For each type of tilt adjustment :

Make sure that the tilt adjustment is symmetrical and that the screws and all the awning components are securely locked before

opening or closing the awning.

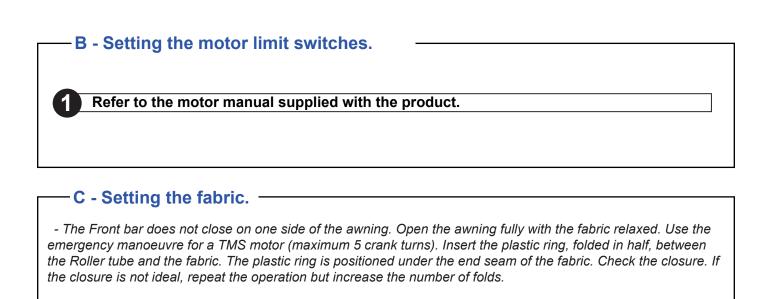

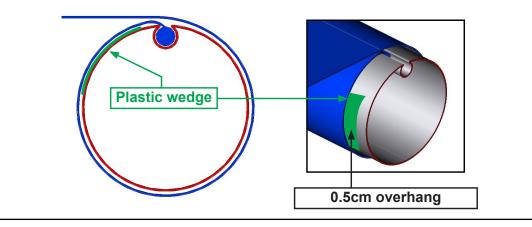

CONSUMER INFORMATION

More information :

- The Front bar may bend slightly (4 to 5 cm). This is due to the considerable thrust of the arms and may cause a pocket in the fabric.

- A slight difference in the fibre bath or colour of the lacquer may be observed between two blinds if they are not purchased at the same time.

- Creases or mottling may appear. They in no way affect the quality or effectiveness of the awning.


- Ripples may appear on the fabric. This is due to excess thicknesses caused by hems and seams, which put stress on the Roller tube.

- Only use the emergency manoeuvre to close the awning in the event of a power cut. Use of the emergency manoeuvre outside these conditions will deprogram the motor limit settings. When using the manoeuvre, make sure that the crank is in line with the emergency socket.

- For an electrical installation with an unstable switch, make sure you leave it in the stop position after each use.

Problems	Causes	Solutions
My awning is coming off the wall.	Screws not adapted to the composition of the wall.	 Check that the brackets are correctly in place (follow the instructions in the leaflet) If fixing with a chemical sealant, refer to the manufacturer's instructions.
My awning is not level.		 Check that the mounting brackets are level. Level again. Vérifier le niveau de la barre frontale. Corriger l'angle des bras (Paragraphe de réglage A)
Front bar does not close along its entire length	Fabric elongates after several uses.	 Adjust the motor limit switches. (Adjustment Paragraph B)
The Front bar does not close on one side of the awning only	Natural elongation of the fabric.	 Adjust the fabric using the plastic shim supplied. (Adjustment Paragraph C)
The electric switch no longer works.	The motor goes into thermal protection after 2 successive ascents and descents.	 Wait for protection to end (20 minutes)
Wait for protection to end (20 minutes)	Connection problem.	 Check the motor connection Check that the motor works by connecting it directly to the electrical supply. (blue black or blue brown)

Important : If you have any doubts about the safety of your work, call in a professional.

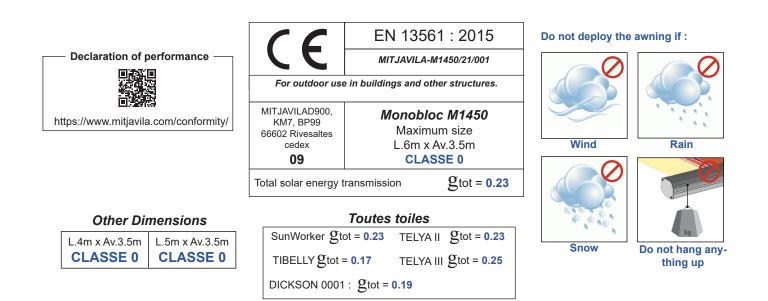







- Never open the awning before it has been fully secured. Before opening the awning, you must make sure that the wall brackets and the fixing of the awning to these brackets have been correctly installed and that the arm brackets, fasteners and all other parts of the awning are tight. The arms of the awning are under tension and could cause injury if opened suddenly. Never open the awning with a torn fabric.

- Check that your wall is flat. If the wall is hollow or curved, shim the supports to align them correctly. Incorrect alignment can cause the awning to malfunction, break or fall.

- Do not operate the awning when maintenance operations, such as window cleaning, are in progress. Disconnect the awning from the power supply when maintenance operations are in progress.

- Do not allow children to play with the controls. Keep the remote control devices out of the reach of children. Supervise your children to ensure that they do not play with the awning or the remote control.

- Watch your fingers during installation.

- No changes to the design or configuration of the equipment should be made without prior consultation with the manufacturer.

- Never use accessories not recommended by the manufacturer. These could create risks for the user and damage the awning. Only use original parts and accessories.

- If the awning is to be stored, it must be stored under cover in a dry, dry environment.

- Do not use the awning in areas subject to vibrations or impulses.
- Use the correct fixings for the material of your façade. Ask a specialist for advice. Fixing hardware is not supplied.
- There must be a horizontal distance of at least 0.4 m between the fully extended awning and any fixed object.
- Do not unpack the awning using tools that could scratch it.

- Never sleep with the awning open, as a sudden change in the weather could cause the awning to fall down.

USING THE AWNING :

- Do not use the awning in bad weather. Use in freezing conditions may damage the awning. Do not use the awning on rainy days. In these cases, the awning must be in the folded position.

- Take care when unfolding the awning, as it can quickly fall down if it is weakened or damaged. Never use the awning if it is damaged. Disconnect the awning from the power supply (switch or fuse), then contact a specialist.

- Only use the awning for its intended purpose.
- We accept no liability for damage caused by incorrect use or failure to follow the instructions.
- Do not hang anything on the frame or folding arms of the awning. It could fall and cause material damage and/or personal injury.
- Do not hang from the frame or folding arms of the awning. It could fall and cause material damage and/or personal injury.
- Make sure you leave enough space around the awning when you roll or unroll it.
- When you first open the awning, open it 50cm and check that the screws and nuts on the wall brackets, arm brackets and fasteners are tight. Do not open the awning if any screws are loose.

- Do not use a barbecue under the awning or light a fire nearby.

- Using the product in freezing conditions may damage the product.

AWNING ADJUSTMENT :

- The end-of-stroke, arm bend, Front bar and tilt settings are pre-set at the factory.

- The adjustment of an awning must be carried out with care because of its constraints and requires a certain level of skill. If you have any doubts about the correctness and safety of your adjustment, call in a professional.

- After making any changes to the settings, make sure that all the awning components are properly tightened.
- Incorrect adjustment can lead to improper use of the awning and cause it to deteriorate.
- If the Front bar is not level, the awning does not close properly or the arm elbows are out of alignment, the awning must be adjusted.

- Do not use the awning if adjustment is necessary.

REPAIR AND MAINTENANCE :

- Never attempt to dismantle or repair an awning without the necessary qualifications. Call in a professional to carry out any necessary repairs. - Do not use the awning if repairs are required.

- Check the installation frequently throughout the year to detect any imbalance or signs of wear to the awning parts or fabric.
- Check the awning wall fixings, the arm support clamp screws and the arm fastener clamp screws frequently throughout the year.
- Do not roll up a wet fabric; dry it as soon as possible. Risk of mould.
- Clean the fabric and frame at the beginning and end of the season. Do not use detergents.

ELECTRICAL PART :

- Before handling, make sure that the electricity supply is switched off. Danger of electrocution.

- If the power cable is damaged, it must be replaced by a qualified person (after-sales service or electrician) to avoid danger. The power cable for this actuator may only be replaced with the same type of cable (same wire cross-section and same protection rating).


- The actuator is intended to be installed at a height of at least 2.5 m from the ground or any other level of access.
- The electrical wires must be connected in accordance with the electrical standards in force in France (standard NF C 15100). If in doubt, contact an approved electrician.

- Before connecting the awning to a power source, check that the voltage of this power source and the rated voltage correspond to the power supply specifications in the manual.

- Do not get the control box wet. The automated system must be positioned away from bad weather.

Do not allow children to play with the control unit.

EXPLODED VIEW

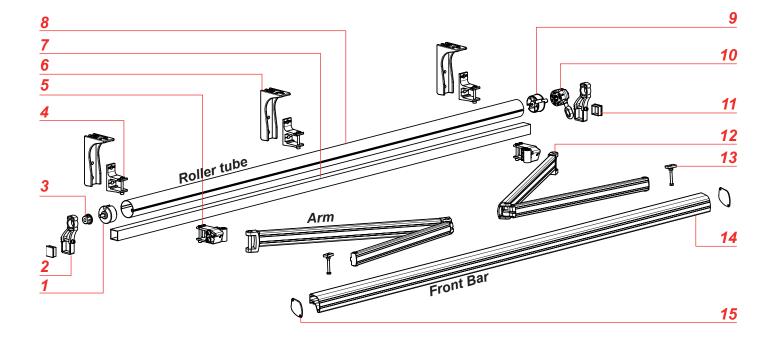

Reference	Désignation	
1	Pin end plug round shaft	
2	Roller tube support	
3	Plastic spacer with collar	
4	Extruded wall bracket	
5	Arm support assembly	
6	Ceiling mounting bracket (optional)	
7	Square tube 40x40	
8	Roller tube	
9	Pin end plug square shaft	
10	Gear box ratio 1/9	
11	Square tube plug	
12	Arm	
13	Arm fastener	
14	Front bar profile	
15	Front bar profile plug	





Installation instructions MONOBLOC AWNING